

CP99 / CPSport Laser Sight OPERATION INSTRUCTIONS

DANGER						
	LASER RADIATION—AVOID DIRECT EYE EXPOSURE					
	<table border="0"><tr><td style="padding-right: 20px;">LASER DIODE</td><td>CLASS IIIA</td></tr><tr><td>Wavelength 635-655 nm</td><td>LASER</td></tr><tr><td>Output Power <5mW</td><td>PRODUCT</td></tr></table>	LASER DIODE	CLASS IIIA	Wavelength 635-655 nm	LASER	Output Power <5mW
LASER DIODE	CLASS IIIA					
Wavelength 635-655 nm	LASER					
Output Power <5mW	PRODUCT					

⚠ CAUTION: Your airgun is not a toy. Treat it with the same respect you would a firearm. Always read all operation instructions found here and in your airgun's owner's manual. If you do not have instructions or an owner's manual, contact Umarex USA or visit www.UmarexUSA.com.

⚠ WARNING: LASER SIGHTS ARE NOT TOYS. LASERS MUST BE USED UNDER THE SUPERVISION OF AN ADULT. IMPROPER USE OR CARELESS USE MAY CAUSE SERIOUS INJURY, ESPECIALLY TO THE EYES. AVOID DIRECT EXPOSURE TO THE LASER BEAM. AVOID SHINING AT MIRRORS. DO NOT AIM AT ANY PERSON OR ANIMAL'S EYES. KEEP OUT OF REACH OF CHILDREN.

HOW TO MOUNT YOUR CP99 / CPSPORT LASER SIGHT

⚠ CAUTION: In order to avoid injury, keep the laser off until you are ready to aim and shoot. Make sure the laser is off when you mount or remove the laser sight.

Mount the laser sight as shown in the illustration (See Fig. A). Mount with the laser beam aperture to the front and push carefully back onto mounting rail, until the laser sight locks in place.



HOW TO REMOVE YOUR CP99 / CPSPORT LASER SIGHT

 
To remove the laser sight, press the locking lever down on both sides at the same time and remove the sight from the mounting rail (See Fig. B).



HOW TO OPERATE YOUR LASER SIGHT

⚠ CAUTION: Make sure the air pistol is pointed in a SAFE DIRECTION. Keep the laser off except when shooting. Never look directly at the laser or point the laser at anything you do not intend to shoot.


Turn the laser on and aim.
Switch in the upper position = OFF
Switch in the lower position = ON

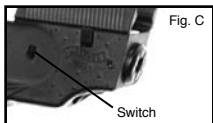

Continued on reverse.


HOW TO AIM AND ADJUST YOUR LASER SIGHT

 Use the front and rear sight to aim the airgun. The laser dot should appear to sit on top of the front sight (See Fig. D). If this is not the case, make the following adjustments by using a hex key:

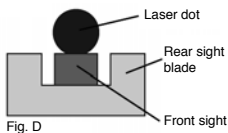

Windage adjustment

 If your airgun shoots too far right, turn the windage adjustment screw counter-clockwise. If your airgun shoots too far left, turn the windage adjustment screw clockwise (See Fig. E).

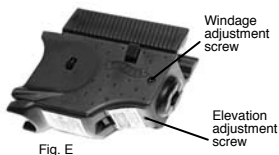



Elevation adjustment

If your airgun shoots too low, turn the elevation adjustment screw counter-clockwise. If your airgun shoots too high, turn the elevation adjustment screw clockwise (See Fig. E).

HOW TO INSTALL OR CHANGE THE BATTERIES

This laser sight utilizes two(2) round cell silver oxide batteries—SR44 or SR44W. Two batteries were included in the original laser sight packaging.

  1. To access battery compartment, press in latch and lift up on compartment door and slide to front of laser (See Fig. F).
2. Remove old batteries if present and insert new batteries keeping in mind their polarities (See Fig. G).
3. Close battery compartment by replacing compartment door.

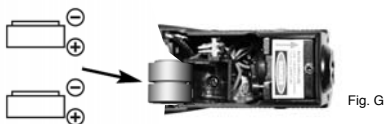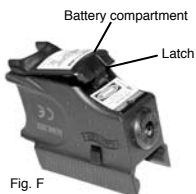

⚠ CAUTION: Buyer and user have the duty to obey all laws governing the use and ownership of airguns and laser sights.

Technical Data

Laser	Class III. Maximum output < 5mW
Wavelength	635-655 nm
Batteries	Two(2) round cell silver oxide SR44 or SR44W Ø11.6 x 5.4 / 1.55v
Mounting	Snap connection on Weaver rail
Special Feature	Two(2) LED indicators on the rear side
Weight / Size	50 g / 60 x 42 x 26 mm

UMAREXUSA®

6007 South 29th Street
Fort Smith, Arkansas 72908 USA
Phone: 479-646-4210
www.UmarexUSA.com