

The Golden Rule of Safe Airgun Handling:

**Always see that the airgun is pointed in a safe direction!
Treat all airguns as if loaded!**



*Supersedes all previous information
PN DC-INS-2 REV 0607*

Barrel Installation Instructions For All Sportsman Series Knock Down Air Rifles

WARNING NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 350 YDS (320 M). INTENDED FOR USE BY THOSE 16 YEARS OR OLDER WITH ADULT SUPERVISION. READ ALL INSTRUCTIONS BEFORE USING. ALWAYS WEAR PROTECTIVE EYEWEAR. THE BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS REGARDING USE AND OWNERSHIP OF THIS AIRGUN.

WARNING DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

Caution

DO NOT ATTEMPT ASSEMBLY of your airgun until you have read these cautions and all printed materials accompanying this airgun. To use this airgun prior to reading the instructions will void any warranty and expose you and others to possible harm! A few minutes now will increase the pleasure you will derive from this airgun.

If instruction manual and literature are not included with this airgun, please ask your dealer or contact Beeman Precision Airguns directly to receive a manual free of charge. The manuals are important to your safety.

IMPORTANT: This tag must not be removed by anyone except the retail customer after reading. It contains required warnings and important information.



Beeman Precision Airguns
5454 Argosy Avenue
Huntington Beach, CA 92649
Voice: 714-890-4800 Fax: 714-890-4808
www.beeman.com

ASSEMBLY PROCEDURE


If your air rifle is taken down into its two component parts, follow these instructions for assembly and for preparing your air rifle for use.

1. Take the provided (4mm) allen key and remove set screw on the bottom of the breech block (Fig. 1)
2. Hold the receiver half of the air rifle in one hand and the barrel half in the other.
3. Position the barrel so that set screw indentation at the end of the barrel is on the underside of the barrel.
4. Line up the indentation on the barrel with the screw hole on the bottom of the breech block. Insert barrel completely, pushing in firmly until it will not go in any further. (Fig. 2)
5. Look thru screw hole to ensure indentation is lined up with hole; turn barrel if needed to align. Re-insert the set screw into the hole and turn clockwise until the screw is hand tightened.
6. Ensure that the barrel will not move by pulling outward on the barrel.
7. The first time you cock the air rifle, make sure that the breech seal is firmly in the groove. (Fig 3)
8. Before using air rifle read all safety and usage instructions in the owner's manual included with this air rifle.

Remove screw w/ allen key



Fig 1

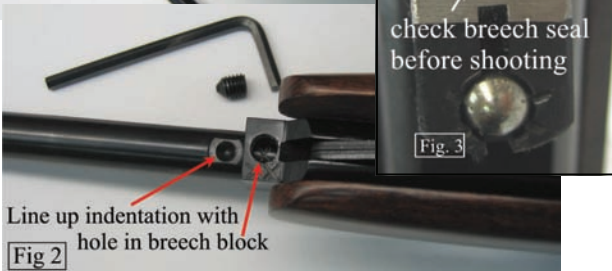

Line up indentation with hole in breech block

Fig 2

check breech seal before shooting

Fig 3

DISASSEMBLY PROCEDURE

Follow these instructions for disassembly and for preparing your air rifle for storage.

1. Make sure air rifle is uncocked and unloaded and is pointed in a safe direction.
2. Reverse assembly procedures.
3. Store air rifle in a safe location out of reach of children.