



OWNERS INSTRUCTION MANUAL

Hero™ 380
Ripper™ 415

YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW!

CONTACT KILLER INSTINCT® AT 810-626-3026 OR CONTACT KILLERCROSSBOWS.COM WITH QUESTIONS.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!

⚠ WARNING

WARNINGS OF GREAT IMPORTANCE ARE FOUND ON FOLLOWING PAGES:

Introduction	2	Cocking Crossbow	11
Safety Information	3	Hand Placement	13
No Alterations	4	Loading & Shooting	14
Manual Safety	10	Unloading	14
Crossbow Arrow Safety	11		

OTHER WARNINGS AND CAUTIONS APPEAR THROUGHOUT THE MANUAL.

TABLE OF CONTENTS	
Introduction	2
Safety Information	3
No Alterations	4
Nomenclature	5
Crossbow Assembly	7
Trigger Box & Anti-Dry Fire	10
Manual Safety	10
Crossbow Arrow Safety	11
Cocking Crossbow	11
Proper Finger, Thumb & Hand Placement	13
Loading & Shooting	14
Unloading	14
Maintenance, Care & Storage	15
Trouble Shooting & Records	16
Warranty	17
Notes	18
Registration	19

THIS INSTRUCTION MANUAL MUST ALWAYS ACCOMPANY THIS CROSSBOW AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP, WHEN LOANED, OR PRESENTED TO ANOTHER PERSON.

**QUESTIONS?
810-626-3026
www.KillerCossbows.com**

INTRODUCTION:

Congratulations on your new Killer Instinct® crossbow purchase! Thank you for your support. Your crossbow has been designed, manufactured, tested, and delivered to be safe when used with all the instructional information provided. **Before assembly**, make the first step with your new crossbow be to read and thoroughly understand all the information and instructional materials included with this product. Read and understand the Owners Instructional Manual from cover to cover. **YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL BEFORE USING THIS CROSSBOW! THIS INCLUDES ANY INFORMATION PROVIDED ON THE CROSSBOW, ARROWS, PACKAGING, HARDWARE, ACCESSORIES, OR OTHER ITEMS PROVIDED. CONTACT KILLER INSTINCT® AT 810-626-3026 OR CONTACT @ KILLERCROSSBOWS.COM WITH ANY QUESTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!** When used in accordance with all the instructional information provided and with proper care and maintenance, your crossbow will provide years of service. Keep and save all instructional materials provided. If crossbow transfers ownership, loaned or presented to another person, Owners Instruction Manual must be kept with crossbow and new owner/borrower must read and understand all instructions and warnings in the Owners Instruction Manual before using crossbow. A crossbow is a deadly weapon! As such, crossbows should be treated as firearms in regards to care and safety.

The five basic rules of firearms & crossbows safety:

- Always point a firearm/crossbow in a safe direction.
- Treat every firearm/crossbow as if it were loaded and never assume a firearm/crossbow is unloaded.
- Keep your finger out of the trigger guard and off the trigger until ready to shoot.
- Keep all parts of body and clothing out of path of bow string and cables of crossbow and out of path of projectile of firearm/crossbow.
- Be sure of your target and what is beyond your target.

Crossbows by design, use a bow string and shoot projectiles at high rates of speed and should only be used by those that have completed a Hunter's Safety Course or trained by a qualified professional. Always use caution to keep all parts of body and clothing out of path of bow string and cables. High speed moving bow strings can cause serious injury if contact occurs such as finger and thumb amputation. Know your target. Projectiles that do not remain on target can cause serious injury or death. Wear safety glasses when cocking, loading and shooting any crossbow. **Think Safety First and Practice Safety First. Safety Starts with You! YOU MUST READ, UNDERSTAND AND FOLLOW ALL WARNINGS AND INSTRUCTIONS IN THIS MANUAL AND ALL OTHER INSTRUCTIONAL MATERIALS PROVIDED BEFORE USING THIS CROSSBOW**

WARNING

CROSSBOW USE FOR EXPERIENCED USERS ONLY! CROSSBOWS SHOULD ONLY BE USED BY THOSE THAT HAVE COMPLETED A HUNTER'S SAFETY COURSE OR TRAINED BY A QUALIFIED PROFESSIONAL.

Crossbow is a deadly weapon! Always keep crossbow pointed in safe direction. Never point at or toward person(s) or at or toward anything you do not intend to shoot.

Always be certain of intended target and what is beyond it before shooting. Never shoot at noise or movement.

Always be aware of your surroundings and ensure no other person or animal is between you and target area.

Always make certain others are well behind you before you shoot.

Never shoot straight up or in any direction that may endanger people or other objects.

Never shoot at hard surfaces or at surface of water. Arrow may bounce back or ricochet and hit someone or an unintended target.

Always keep thumb and fingers below flight rail, string, barrel and behind cables.

To prevent accidental discharge, always keep crossbow safety on 'SAFE'. Only position safety to 'FIRE' when ready to shoot.

Never store or transport crossbow in cocked or loaded position. Accidental discharge could occur.

Keep crossbow out of reach of children!

Always wear full body harness (not included) that has been certified by a Third Party Testing Facility that meets or exceeds Industry Standards when hunting from treestand or at heights.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH!



WARNING

IMPORTANT SAFETY INFORMATION:

- Never dry fire crossbow (fire without arrow loaded). This will void warranty, damage crossbow and may cause serious injury or death.
- Never put your finger on trigger until you are ready to shoot as you could accidentally fire crossbow causing serious injury or death
- Do not modify crossbow or remove or deactivate crossbow's safety features.
- Never walk, stalk, or carry crossbow with arrow loaded in crossbow. It is acceptable to carry a cocked but unloaded crossbow.
- Always use caution to keep all parts of body and clothing out of path of bow string and cables.
- Never fire crossbow if branches, tree, blind windows/walls, or obstructions may contact crossbow or crossbow limbs in its release path.
- Always keep crossbow string and cables away from sharp objects as they may cut string or cables. DO NOT use if string or cables are cut or show signs of wear, contact KILLER INSTINCT™ at 810-626-3026 or e-mail support at contact@killercrossbows.com or take to an authorized KILLER INSTINCT™ dealer for inspection.
- If under age of 18 do not use without adult supervision.
- Always place broadheads in quiver when transporting or storing crossbow to prevent contact with string/cables.
- Never use crossbow while taking or under influence of drugs (even prescription drugs) or alcohol.
- Wear safety glasses when cocking, loading and shooting any crossbow.
- Always obey all safety rules and laws covering ownership and use of this crossbow in your state, hunting or shooting area. Locate and read all such rules prior to using crossbow.
- Only use crossbow for intended use of hunting and target shooting. Do not use for any other purpose!

IMPORTANT SAFETY INFORMATION CONTINUED:

- Do not climb up or down a tree with crossbow or hoist loaded crossbow. Always unload crossbow and use hoist rope to lift up and down tree or elevated hunting platform.
- Never modify your crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it other than KI accessories designed specifically for KILLER INSTINCT™ crossbows.
- When target practicing, always setup proper crossbow target and backstop in safe open area with nothing beyond target you do not intend to shoot.
- When cocking crossbow use proper lifting techniques to avoid injury to back (lift with arms and shoulders).
- Never use this product when feeling ill, nauseous, dizzy or if you have pre-existing medical condition that could cause a problem cocking or shooting crossbow.
- Examine crossbow and arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. If damage is suspected, DO NOT use crossbow and arrow(s), contact KILLER INSTINCT™ at 810-626-3026 or e-mail support at contact@killercrossbows.com.
- Do not use crossbow if it is not in top working condition, contact KILLER INSTINCT™ at 810-626-3026 or e-mail support at contact@killercrossbows.com for assistance.

NO ALTERATIONS OR ADJUSTMENTS:

WARNING

Do not modify, remove, or deactivate crossbow's safety features.

Do not modify crossbow in any way by making repairs, replacing parts, altering, adding or attaching anything to it.

NO ALTERATIONS:

This product is designed to function properly in its original condition. Alterations can make it unsafe. Do not alter, add, or substitute parts or accessories not made by Killer Instinct™.

NO ADJUSTMENT – LIMB BOLTS:

Do not attempt to adjust limb bolts by tightening or loosening bolts. Limb bolts are factory adjusted to specific torque specifications to optimize crossbow performance.

Do not attempt to change string, cables or limbs without proper tools and instruction. Always have qualified Killer Instinct™ professional or authorized KILLER INSTINCT™ dealer perform these maintenance procedures.

NOTE: A crossbow press and qualified technician is required to change/install string, cables, limbs, cam assemblies, etc.

HERO™ 380 NOMENCLATURE:

- Unpack and Check
- Review & Confirm all items are included in Parts List. If they are not, stop and contact KILLER INSTINCT™ customer service before continuing or using this product.

PARTS LIST:

Qty	Part No.	Description
1	SPK-1100-FSA	HERO™ 380 Stock Assembly (Stock - SPK-1100-Stock, ½" Butt Plate Assembly – SPK-1100-BP, KI Trigger Box – SPK-0005, Forearm Grip – SPK-1100-FG, Pistol Grip w/Hardware – SPK-1100-PG).
1	SPK-1100-FRONT END	Front End Assembly (Riser Assembly – SPK-1100-RA , Limb Set – SPK-1100-LS, Cam Assembly Set – SPK-1100-CA, Cables – SPK-1100-C, String – SPK-HERO-RP-S, String Suppressor Set – SPK-1073, Front End Assembly Hardware – SPK-1087-RB).
1	SPK-0002	Cable Slide
1	SPK-1100-FS	Fixed Foot Stirrup and Assembly Hardware
1	SPK-LUMIX-WR	Lumix 4x32 IR-W W/Scope Rings and Assembly Hardware
1	SPK-1116-B	Rail Lube
1	SPK-1070	Rope Cocker
1	SPK-1077-KI	5-Bolt Quiver
1	SPK-1076-V2	Tactical Side Mount Quiver Mount and Assembly Hardware
3	SPK-1060-KI-LT	20" KillerTech™ Bolts w/Half Moon Nocks & 100 Gr. Field Points (SPK- 1060-TIP)
1	SPK-1100-BP-1	1" Butt Plate Assembly w/Hardware
1	SPK-HERO-RP-IM	Instructions and Safety Manual



Note: Actual model may differ than one shown. Not shown: Quiver system (accessories may not apply to some models).



KEEP THUMB / FINGERS ON FOREARM GRIP AND BELOW FLIGHT RAIL AND CABLES




RIPPER™ 415 NOMENCLATURE:

- Unpack and Check
- Review & Confirm all items are included in Parts List. If they are not, stop and contact KILLER INSTINCT™ customer service before continuing or using this product.

PARTS LIST:

Qty	Part No.	Description
1	SPK-1105-FSA	RIPPER™ 415 Stock Assembly (Stock – SPK-1105-Stock, Adjustable Stock End – SPK-1105-Stock-E , KI Trigger Box – SPK-0005, Forearm Grip – SPK-1105-FG).
1	SPK-1105-FRONT END	Front End Assembly (Riser Assembly – SPK-1105-RA , Limb Set – SPK-1105-LS, Cam Assembly Set – SPK-1105-CA, Cables – SPK-1105-C, String – SPK-HERO-RP-S, Limb Dampeners – SPK-1105-LD, String Leeches – SPK-1105-SD, String Suppressor Set – SPK-1073, Front End Assembly Hardware – SPK-1087-RB).
1	SPK-0002	Cable Slide
1	SPK-1105-FS	Angled Fixed Foot Stirrup and Assembly Hardware
1	SPK-LUMIX-WR	Lumix 4x32 IR-W W/Scope Rings and Assembly Hardware
1	SPK-1116-B	Rail Lube
1	SPK-1070	Rope Cocker
1	SPK-1077-KI	5-Bolt Quiver
1	SPK-1076-V2	Tactical Side Mount Quiver Mount and Assembly Hardware
3	SPK-1060-KI	20" KillerTech™ Bolts w/Half Moon Nocks & 100 Gr. Field Points (SPK-1060-TIP)
1	SPK-HERO-RP-IM	Instructions and Safety Manual

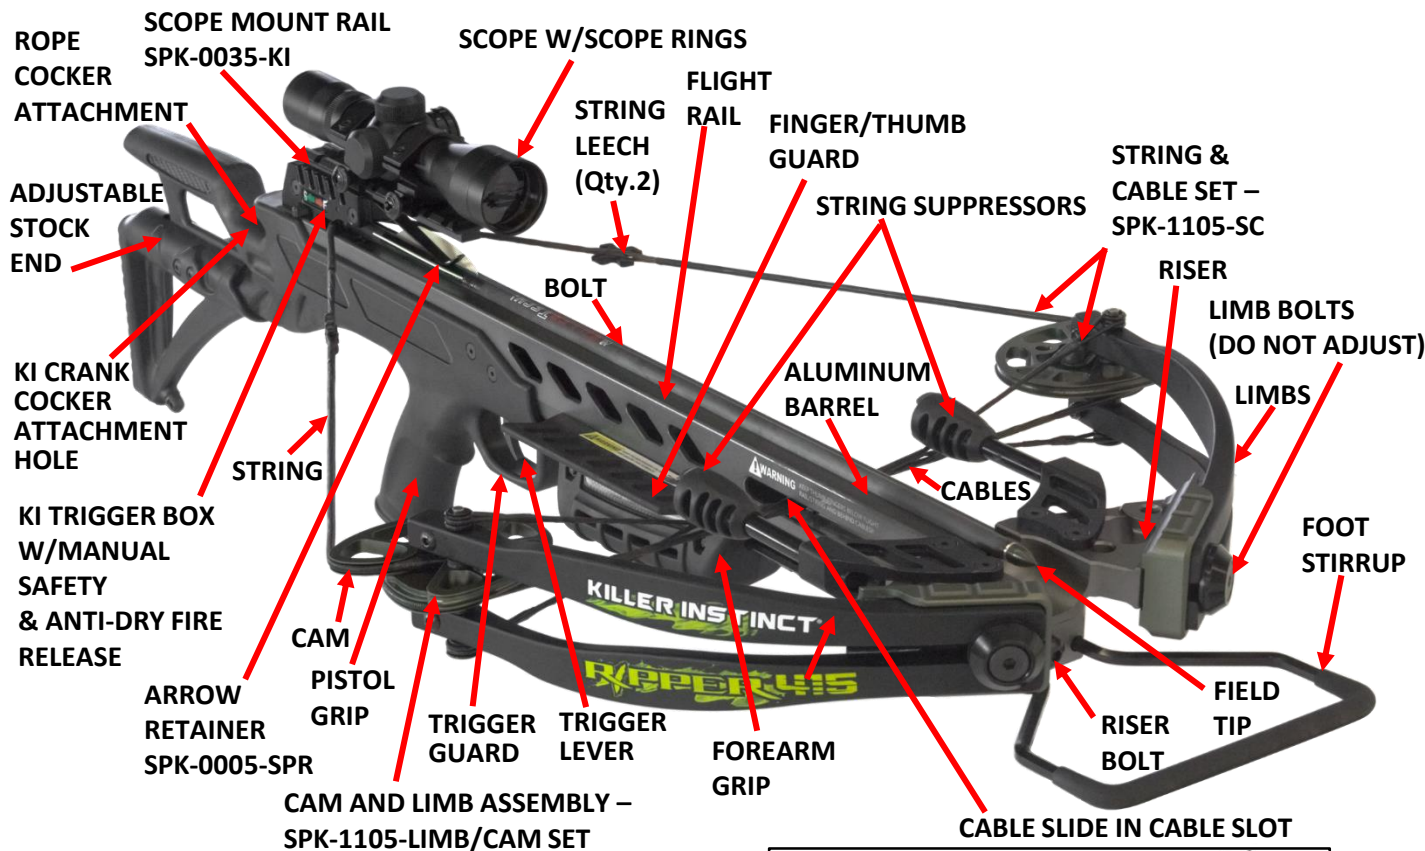

Note: Actual model may differ than one shown. Not shown: Camo, Quiver system, Limb Dampeners (accessories may not apply to some models).



KEEP THUMB / FINGERS
ON FOREARM GRIP
AND BELOW FLIGHT
RAIL AND CABLES



CROSSBOW ASSEMBLY (HERO™ 380 and RIPPER™ 415):



DO NOT MODIFY CROSSBOW!
QUESTIONS CALL 810-626-3026


RAIL LUBE

PRIOR TO ASSEMBLY apply Rail Lube to string, cables, both sides of cable slide, and flight rail. RAIL LUBE MUST BE APPLIED TO STRING, CABLES AND FLIGHT RAIL ON REGULAR BASIS TO PREVENT WEAR. Apply as often as needed or when rail lube appears to have worn off flight rail, string or cables.








ATTACHING FRONT END TO BARREL AND INSTALLING FOOT STIRRUP

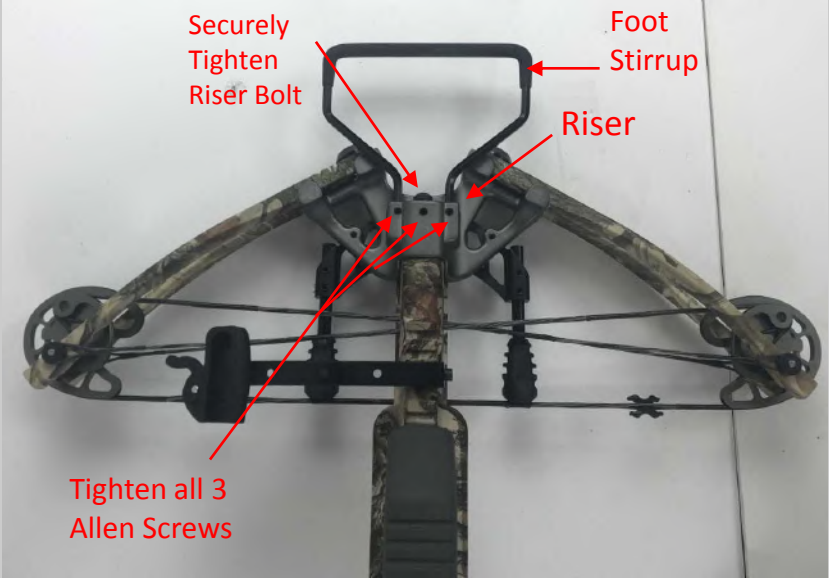STEP	INSTRUCTION	IMAGE
#1	<p>REMOVE CABLE SLIDE FROM CABLES Use caution removing Cable Slide so you do not cut cables. With top of riser facing up, place Cable Slide on top of crossbow cables as shown. Cables fit into grooves on bottom side of Cable Slide so wedge on cable slide (in between cables) points to crossing cables.</p> <p>Double check cables cross on Left side, wedge point faces crossing cables, and cables are underneath Cable Slide (From Top View).</p>	<p>Top View Cables cross on Left Riser Cable Slide</p> <p>BOTTOM VIEW Wedge Point Faces Crossing Cables Cable Slide Crossing Cables</p>
#2	<p>Holding Cable Slide in place (cables underneath Cable Slide), insert Cable Slide and cables into cable slot so curve on Cable Slide is on curve of barrel groove. Continue inserting Cable Slide and cables into slot while keeping string on TOP of barrel.</p>	<p>Cable Slide Curve slides on Barrel Groove Curve Cables Cross on Left Side of Barrel String on Top of Barrel Cable Slide into Cable Slot</p>
	<p>CAREFULLY INSERT CABLES AND CABLE SLIDE INTO BARREL SLOT TO PREVENT CABLE PINCHING OR CABLE CONTACT WITH EDGES OF BARREL! CABLE SLIDE MUST BE INSTALLED BEFORE ATTACHING FRONT END! QUESTIONS CALL 810-626-3026</p>	
#3	<p>Push riser completely overtop of barrel, making sure riser lines up with barrel.</p>	<p>Riser lines up with Barrel</p>

CROSSBOW ASSEMBLY CONTINUED ((HERO™ 380 and RIPPER™ 415):

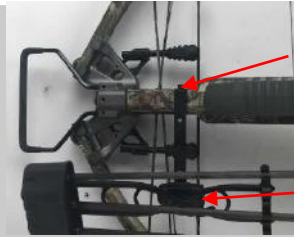STEP	INSTRUCTION	IMAGE
#4	<p>Place riser bolt w/lock washer through center hole of the riser and thread into the barrel. Note: Make sure the middle Allen set screw does not interfere with the Riser bolt at this point. <i>(Tip: with bow upside down, push down on string to allow riser bolt to easily tighten.)</i> Securely tighten riser bolt so riser contacts barrel and there is no gap between riser and barrel. Tighten middle Allen set screw to lock riser bolt in place.</p> <p>Place foot stirrup into the outer holes of the riser. Align the 2 flats of the foot stirrup so the holes in the riser match. Tighten the foot stirrup into place by using the 2 Allen set screws included.</p> <p>Double check that all 3 Allen set screws are securely tightened.</p>	 <p>The image shows a top-down view of a crossbow. Red arrows point to four specific areas: 1. The central riser bolt, labeled 'Securely Tighten Riser Bolt'. 2. The foot stirrup on the right side, labeled 'Foot Stirrup'. 3. The riser assembly, labeled 'Riser'. 4. The three Allen screws on the riser, labeled 'Tighten all 3 Allen Screws'.</p>


QUIVER, SCOPES, STRING SUPPRESSORS AND SLING:

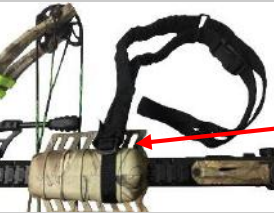STEP	INSTRUCTION	IMAGE
<p>QUIVER</p>	<p>(HERO™ 380, RIPPER™ 415) Attach side quiver bracket to picatinny rail under front of barrel using included hardware. Attach quiver base to quiver bracket using included hardware. Attach quiver to base.</p>	 <p>Attach Quiver Bracket to Picatinny Rail</p>  <p>Attach Quiver To Quiver Base</p>
<p>LUMIX SCOPE</p>	<p>(HERO™ 380, RIPPER™ 415) Attach Scope to picatinny rail on top of trigger box using included scope rings and hardware. Always make sure screw on scope ring clamp is fully seated in picatinny grooves and all screws are tight.</p>	 <p>Attach Scope Rings & Scope to Picatinny Rail</p>
<p>STRING SUPPRESSOR</p>	<p>(HERO™ 380, RIPPER™ 415) Position string suppressor so gap between suppressor and string is approximately 1/32" wide (about the width of a credit card). Securely tighten screws.</p>	 <p>Securely tighten screws.</p> <p>1/32" Space Between Suppressor and String</p>
<p>SINGLE POINT SLING</p>	<p>(HERO™ 380) Attach Single Point Sling to the Forearm as shown. (Note: Optional accessory - May not apply to all models).</p>	 <p>Place Sling through Forearm & Secure Buckle</p>
<p>SINGLE POINT SLING</p>	<p>(RIPPER™ 415) Attach Single Point Sling to the Forearm as shown. (Note: Optional accessory - May not apply to all models).</p>	 <p>Place Sling through Forearm & Secure Buckle</p>
<p>SINGLE POINT SLING (W/ADAPTER USE)</p>	<p>(HERO™ 380, RIPPER™ 415) Securely connect adapter to picatinny rail. Attach Single Point Sling to the Sling Attachment Point Adapter Accessory as shown. (Note: Optional accessory - May not apply to all models).</p>	 <p>Place Sling through Adapter Accessory & Secure Buckle</p>

KI TRIGGER BOX AND ANTI-DRY FIRE (HERO™ 380, RIPPER™ 415 MODELS):

Never lift Anti-Dry Fire mechanism and move safety to 'FIRE' when crossbow arrow is not loaded. This deactivates Anti-Dry Fire allowing crossbow to be dry fired. Never Dry Fire crossbow. This will void warranty and may cause serious injury or death. Always keep crossbow safety in 'SAFE' position until ready to shoot.

⚠️ WARNING

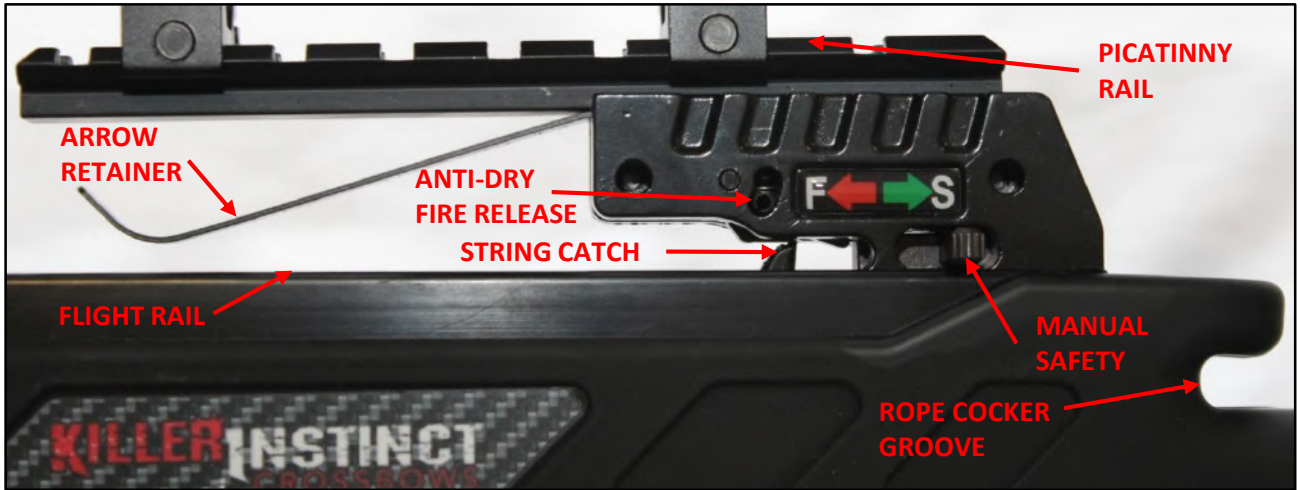

ANTI-DRY FIRE RELEASE MECHANISM:



USE ONLY WHEN CROSSBOW IS UNCOCKED!

When crossbow is uncocked, use to move safety from 'SAFE' position to 'FIRE' position for cocking. Lift anti-dry fire release and move safety from 'SAFE' to 'FIRE' position. Crossbow is ready for cocking.

OPERATION OF KI MANUAL SAFETY (HERO™ 380, RIPPER™ 415 MODELS):

⚠️ WARNING

Even though crossbow is equipped with auto engaging safety, always check to assure safety is in 'SAFE' position when crossbow is in cocked position. Always keep crossbow safety in 'SAFE' position until ready to shoot.

INSTRUCTION

IMAGE

SAFETY IN 'SAFE' (S) POSITION

Safety is in 'SAFE' position when manual safety is in back position (furthest from string).



Always keep crossbow safety in 'SAFE' position until ready to shoot.




SAFETY IN 'FIRE' (F) POSITION

Safety is in 'FIRE' position when safety is in forward position (closest to string).



Crossbow will fire when trigger is pulled.

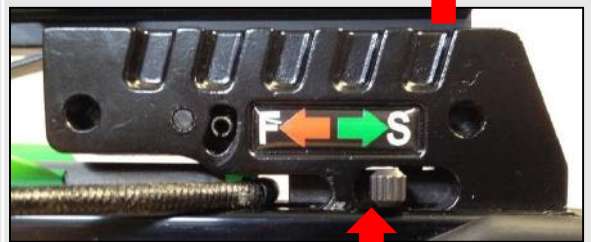

CROSSBOW ARROW SAFETY:

WARNING

Only use arrow(s) with half moon nocks.

Only use finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length 20 inches. Under weight arrows can damage crossbow.

Failure to follow these instructions can result in serious injury or death!

CROSSBOW ARROW SELECTION:

Always use a finished arrow(s) (arrow and point) weighing at least 370 grains and minimum length of 20 in.

Always use arrow(s) with half moon nocks.

Always use field point or broadhead installed on arrow. NEVER SHOOT CROSSBOW ARROW WITHOUT FIELD POINT OR BROADHEAD.

WARNING

Always inspect arrow(s) before every shot for damage including but not limited to bends, cracks, nicks, cuts, fractures, damaged nock, missing insert or point. DO NOT SHOOT A DAMAGED ARROW OR IF DAMAGE IS SUSPECTED.

Failure to follow these instructions can result in serious injury or death!

INSPECTING CROSSBOW ARROWS:

Always inspect arrow prior to every shot. Damage can occur from impacts with hard objects, other arrows or after being shot into a game animal. A damaged arrow can break upon shot resulting in injury to you, bystanders and damage crossbow.

1. Slowly run your fingers along entire length of arrow and nock, feeling and looking for bends, cracks, nicks, cuts, fractures, splits, dents or other marks that could indicate damage. If damaged or suspect damage do not shoot arrow.
2. Grab arrow above point and below nock, then flex arrow (bending away from you and others) with 0.5 to 1 inch deflection and listen for cracking noises. Repeat 5 or 6 times rotating arrow between each flex. If you feel or hear cracking, arrow has been damaged. Do not shoot arrow.
3. While holding both ends of arrow, twist shaft in both directions. If arrow relaxes or twists easily, arrow has been damaged. Do not shoot arrow.
4. Always check all arrow components prior to shooting. Tighten loose components. Loose components can cause unbalanced flight and may partial dry fire crossbow.

WARNING

Never shoot crossbow arrow(s) if you observe or suspect damage!
Discard damaged arrow.

COCKING CROSSBOW:

WARNING

Do not cock crossbow by hand as possible back, shoulder or finger injuries may occur.

Always use rope cocking device or KI Crank Cocker (*sold separately*) to cock crossbow.

Never cock or use crossbow when feeling ill, nauseous, dizzy or if you have prior medical condition that could cause a problem cocking or shooting crossbow.







When cocking crossbow use proper lifting techniques to avoid injury to back (lift with arms and shoulders).

Do not de-cock crossbow with a cocking device or by any other means. (*See UNLOADING CROSSBOW section on page 13 to de-cock crossbow*)

USING ROPE COCKING DEVICE:

IMPORTANT NOTE: ALWAYS USE ROPE COCKING DEVICE OR KI SERIES CRANK COCKER (SOLD SEPERATELY). THESE DEVICES EVENLY PULL STRING TO COCKED POSITION RESULTING IN IMPROVED ACCURACY AND TIGHTER GROUPS.

COCKING CROSSBOW (CONTINUED):

STEP	INSTRUCTION	IMAGE
#1	With flight rail, string and cables lubed, place crossbow stirrup on ground (stirrup in front of riser and butt stock up). Insert foot through stirrup so foot extends through stirrup and stirrup rests in middle of foot.	
#2	Hold hooks of Rope Cocker in each hand approximately 4 inches apart with hook opening facing up. Place rope, between hooks, in rope cocker groove on stock behind trigger box.	
#3	Leaning over crossbow extend rope cocker hooks along each side of barrel and attach hooks to string on each side of barrel. Make sure hooks are facing up.	
#4	Keeping foot and stirrup flat on ground, grab handles and pull up and back towards your hips (using legs, shoulders and arms) until string fully engages into trigger box assembly. Slowly release tension and remove hooks and Rope Cocker from crossbow. Crossbow is now Cocked.	<div data-bbox="696 846 973 1085" style="border: 1px solid black; padding: 5px;"> <p>ALWAYS MAKE SURE STRING FULLY ENGAGES TRIGGER BOX BEFORE RELEASING TENSION ON ROPE COCKER.</p>  </div> 
#5	Even though safety automatically engages when cocked, make certain crossbow is in 'SAFE' position (back position furthest from string).	

PROPER FINGER, THUMB, AND HAND PLACEMENT:

WARNING

Always keep thumb and fingers below string, flight rail, barrel and behind /below cables.

Failure to do so may result in serious injury to hand, including possible thumb or finger amputation.



INSTRUCTION

IMAGE

CORRECT

Keep trigger hand on grip behind trigger.

Always keep other hand securely gripping Forearm Grip with fingers and thumb below strings path, flight rail, barrel and behind / below cables.

READY TO SHOOT!



INCORRECT



THUMB ABOVE BARREL AND IN STRINGS PATH!
DO NOT SHOOT!

STOP! DO NOT SHOOT!



INCORRECT



FINGERS ABOVE BARREL AND IN STRINGS PATH!
DO NOT SHOOT!

STOP! DO NOT SHOOT!




INCORRECT



FINGERS OR THUMB INFRONT OR ABOVE CABLES!
DO NOT SHOOT!

STOP! DO NOT SHOOT!

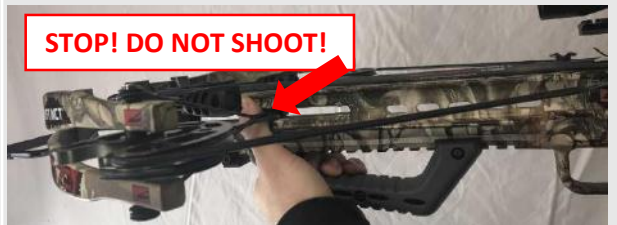

INCORRECT



THUMB, FINGERS OR HAND OFF OR BEHIND OR IN FRONT OF FOREARM GRIP AND ABOVE BARREL!
DO NOT SHOOT!

STOP! DO NOT SHOOT!



INCORRECT



THUMB, FINGERS ABOVE FINGER/THUMB GUARD!
DO NOT SHOOT!





STOP! DO NOT SHOOT!



LOADING AND SHOOTING:

WARNING

Even though crossbow is equipped with anti-dry-fire device do not pull trigger without arrow properly loaded.
Always keep crossbow safety in 'SAFE' position until ready to shoot.

STEP	INSTRUCTION	IMAGE
#1	Place a Killer Instinct™ recommended crossbow arrow in flight groove on top of barrel (keep hand in the area between string at Zero Draw and Riser). Place odd color vane (cock feather) into flight groove ensuring curve of nock matches curve of string. If not orientate crossbow arrow so nock curve matches string curve.	
#2	Slide arrow back under arrow retainer until curve of nock rests solidly next to string (still keeping hand in the area between string at Zero Draw and Riser). <div data-bbox="159 710 751 799" style="border: 1px solid black; padding: 5px;">  Always make sure arrow nock rests solidly next to string before shooting </div>	
#3	Crossbow is ready to shoot. With fingers/thumb on forearm grip, aim, push safety to 'FIRE' position and slowly squeeze trigger to shoot.	
<div data-bbox="82 1066 145 1130" style="float: left; margin-right: 10px;"></div> <p>Always be certain of intended target and what is beyond it before shooting. Never shoot straight up or in any direction that may endanger people or other objects. Never shoot at hard surfaces or at surface of water. Arrow may be damaged, bounce back or ricochet and hit someone or an unintended target. Always keep thumb and fingers below flight rail / string and behind cables.</p>		
#4	Shoot at 10 yards using top scope reticle to confirm you are close to bulls eye. Make windage/elevation adjustments to get closer to bulls eye. Increase distance to 20 yards and fine tune scope. Continue shooting at additional yardages using lower scope reticles. Lower reticles are for greater distances.	<p><i>NOTE: Each reticle line represents approximately 10 yard increments (using 400 grain total arrow weight). This may vary with aftermarket arrows and different weight field tips / broadheads.</i></p> <p><i>SHOOTING TIP: For increased accuracy and tighter groups, follow through with your shot by watching arrow hit target through scope.</i></p>

UNLOADING CROSSBOW:

WARNING

Always use Killer Instinct™ recommended arrow to unload crossbow.
Do not de-cock crossbow by hand, with cocking rope, Crank Cocker or by any other means other than shooting an arrow or appropriate discharge arrow.

UNLOADING CROSSBOW:

Recommended and safest way to unload crossbow is to fire arrow into suitable target or rock-free ground. If firing into ground, make sure ground is not frozen or hard and shoot at point approximately 4 to 5 feet in front of you at 45 degree angle. Firing at greater distances may result in lost arrow in dirt or ricochet.

TIME ALLOWED TO KEEP CROSSBOW COCKED:

Crossbow can remain cocked 12 hours. Do not leave crossbow cocked overnight or when transporting.

MAINTENANCE, CARE AND STORAGE:

WARNING

Always examine crossbow and crossbow arrows after every shot for worn, loose, damaged or missing parts and cracks or damage to arrows. DO NOT use worn or damaged crossbow or crossbow arrow(s). Always store crossbow uncocked and out of reach of children.

SCHEDULE	MAINTENANCE
PRIOR TO EVERY SHOT	Thoroughly check crossbow and crossbow arrow for worn, loose, damaged or missing parts every time you use crossbow. Do not use worn or damaged crossbow or crossbow arrow(s).
PRIOR TO EVERY SHOT	Check and confirm arrow retainer is in good working order as it is designed to apply consistent downward pressure on arrow.
PRIOR TO FIRST SHOT	Lube flight rail with KI's rail lube to increase arrow speed and reduce friction to extend life of string, serving and cables.
EVERY 5 – 10 SHOTS	Reapply rail lube on flight rail, string and cables as often as needed or after every 5 to 10 shots.
AFTER INITIAL 20 SHOTS ANNUALLY OR AS NEEDED	Check screws/bolts for tightness on crossbow scope base, scope rings, riser bolt, quiver base and string suppressors.
ANNUALLY OR AS NEEDED	Annually or as needed apply rail lube to cable slide.
IMMEDIATE IF WEAR IS DETECTED	Immediately replace worn, cut or frayed string, serving and cables prior to shooting. Keep string, serving and cables lubed with KI rail lube.
EVERY 2 YEARS	KI recommends replacing string, serving and cables every three years in normal hunting/shooting conditions or sooner if signs of wear exist.
EVERY 3 YEARS	Free 3 year service inspection. Take your crossbow to an authorized KILLER INSTINCT™ retail dealer or contact Customer Service at 810-626-3026 or at contact@killercrossbows.com for crossbow inspection and warranty retention.
IMPORTANT	KILLER INSTINCT™ and KILLER INSTINCT™ authorized dealers are only repair facilities authorized to open or disassemble crossbow or make repairs/replacements of strings, serving, cables, limbs, trigger boxes, barrels, etc. Unauthorized repairs may void warranty. If repairs are needed, contact Customer Service at 810-626-3026 or e-mail support at contact@killercrossbows.com for assistance.

CARE

Keep flight rail, cams, cables, string, trigger box and trigger clean and free of debris, mud, dirt, etc.

After exposing crossbow to damp or wet conditions, completely dry off crossbow before storing.

Do not expose crossbow in excessive heat such as leaving in an automobile on a hot day.

STORAGE

Store crossbow in uncocked position and out of reach of children.

Store indoors in a cool dry location away from excessive heat and moisture.

TROUBLE SHOOTING:

	PROBLEM	SOLUTION
#1	Burning smell after shot	Re-apply KI rail lube to flight rail, string, cables and/or cable slide. Keep fingers out of cable slot on barrel.
#2	String, serving and/or cables are fuzzy	Apply thin coating of rail lube on string, serving and cables and rub lube into string and cables rubbing between your fingers.
#3	String and/or cable serving is coming apart or separating	Do not use crossbow. Replace string and cable or reserve string and cable. Take your crossbow to an authorized KILLER INSTINCT™ retail dealer or contact Customer Service at 810-626-3026 or at contact@killercrossbows.com for assistance.
#4	String and/or cables are cut or fraying	Do not use crossbow. Replace string and/or cables. Take your crossbow to an authorized KILLER INSTINCT™ retail dealer or contact Customer Service at 810-626-3026 or at contact@killercrossbows.com for assistance.
#5	Unable to cock crossbow	Make sure the safety is in the “Fire” position prior to cocking the crossbow. If the safety is in the “Safe” position, follow the “Anti-Dry Fire Release Mechanism” on page 9. If questions, contact Customer Service at 810-626-3026 or at contact@killercrossbows.com for assistance.
#6	Additional Problems	Take your crossbow to an authorized KILLER INSTINCT™ retail dealer, contact Customer Service at 810-626-3026 or at contact@killercrossbows.com for assistance. Visit www.KILLERCROSSBOWS.COM for additional information.

CROSSBOW OWNER’S RECORD

FILL IN THE FOLLOWING CROSSBOW RECORD FOR QUICK REFERENCE.

CROSSBOW SERIAL NUMBER:

CROSSBOW MODEL NUMBER:

PURCHASED FROM:

PURCHASED DATE:

IMPORTANT:

REGISTER YOUR CROSSBOW AND SAVE YOUR SALES RECEIPT AND SERIAL NUMBER. THIS PROOF WILL BE REQUIRED FOR YOUR FREE INSPECTION AND IS REQUIRED SHOULD YOUR CROSSBOW EVER NEED WARRANTY SERVICE.

ATTACH SALES RECEIPT TO OWNERS MANUAL FOR SAFEKEEPING.

NOTES:

KILLER INSTINCT™ LIMITED LIFETIME WARRANTY*

LIMITED LIFETIME WARRANTY. YOUR KILLER INSTINCT™ CROSSBOW IS WARRANTED AGAINST ANY MANUFACTURER DEFECTS FOR THE LIFE OF THE CROSSBOW TO THE **ORIGINAL, REGISTERED OWNER.** THIS INCLUDES ALL CROSSBOW PARTS EXCEPT STANDARD USE WEARABLE COMPONENTS (STRING, SERVING, CABLES, CABLE SLIDE), ACCESSORIES (RUBBER PARTS, ARROWS/BOLTS, ROPE COCKER, SCOPE, ETC) AND COSMETIC APPEARANCE (SCRATCHES, MARKS, CHIPS) CAUSED BY NORMAL USE AND WEAR. CONTACT YOUR AUTHORIZED KILLER INSTINCT™ RETAILER OR CUSTOMER SERVICE AT 810-626-3026 OR E-MAIL AT CONTACT@KILLERCROSSBOWS.COM FOR WARRANTY CLAIMS. ANY AND ALL WARRANTIES, WRITTEN OR IMPLIED, ARE VOID WITH ANY ALTERATIONS TO THE CROSSBOW.

REGISTRATION TO ACTIVATE FREE LIFETIME SERVICE INSPECTION AND LIMITED LIFETIME WARRANTY

Register within 30 days of your purchase online at www.killercrossbows.com or mail in completed warranty card received at purchase.

FREE LIFETIME SERVICE INSPECTION

Receive a lifetime of free inspections at your KILLER INSTINCT™ dealer every 3 years from date of purchase for original registered owner. Free inspection is not transferable. Simply take your registered crossbow with copy of original receipt to an authorized KILLER INSTINCT™ dealer every 3 years and they will inspect bow free of cost**. 3 Year Inspection Form is available at www.killercrossbows.com.

SERVICING YOUR KILLER INSTINCT™ CROSSBOW:

If you need repairs, have warranty issues or are up for free 3 year service inspection, take your registered crossbow with copy of original receipt to an authorized KILLER INSTINCT™ retail dealer or contact Customer Service at 810-626-3026 or e-mail support at contact@killercrossbows.com for assistance.

The owner is responsible for all shipping costs for crossbows returned to Killer Instinct™ for inspection.

Note: All labor costs associated from maintenance, repairs/replacements resulting from general service or the free lifetime service inspection are the responsibility of the owner.

WARRANTY IS VOID IF

- The KILLER INSTINCT™ crossbow is damaged from abuse, mishandling, dry-firing, alterations or modifications to the original product.
- The KILLER INSTINCT™ crossbow is not registered within 30 days.
- The KILLER INSTINCT™ crossbow is not the original owner
- The KILLER INSTINCT™ crossbow is older than 3 year from date of purchase and has not received Free Lifetime Service Inspection.

LIMITATION OF LIABILITY

USE ONLY AS INTENDED. MANUFACTURER ASSUMES NO RESPONSIBILITY FOR INJURY, DAMAGE OR LOSS ARISING FROM THE USE OF THIS PRODUCT HOWSOEVER CAUSED.

PLEASE NOTE:

KILLER INSTINCT™ reserves the right to make substitutions on warranty coverage for any reason, including but not limited to available parts.

*Limited Lifetime Warranty to the Original Owner.

**Free inspection does not cover labor costs, freight costs, or costs associated with replacement/repair of parts of excluded from Limited Lifetime Warranty.

KILLER INSTINCT™ CROSSBOWS
Phone: 810-626-3026
Email: contact@killercrossbows.com
Website: www.killercrossbows.com
Shipping/Receiving Address:
413 List St., Suite #2
Frankenmuth, MI 48734



Distributed by:
KILLER INSTINCT, LLC
393 List ST. STE B
Frankenmuth, MI 48734

KILLER INSTINCT® is a registered trademark of HAWK GROUP, LLC. ALL RIGHTS RESERVED

REGISTER ONLINE FOR
Limited Lifetime Guarantee!

Go to:

WWW.KILLERCROSSBOWS/PAGES/REGISTER-YOUR-BOW

Easy Quick-Step Directions:

1. <https://www.killercrossbows.com/pages/register-your-bow>
2. Enter in your contact information
3. Enter retailer purchased from, bow model and serial number
4. Click Submit! Now you are covered!

Questions? We can help!

Call us at: 810.626.3026 or

Email: contact@killercrossbows.com

If you cannot register online, completely fill out registration information below, cut out only this portion of the instruction manual, put it into an envelope, place postage on envelope and mail this portion to the address below:

KILLER INSTINCT™ CUSTOMER SERVICE
393 List St., Suite B,
Frankenmuth, MI 48734

REGISTERING YOUR KILLER INSTINCT™ CROSSBOW BY MAIL

LAST NAME: FIRST NAME:

STREET ADDRESS:

CITY: STATE/PROVINCE:

ZIP/POSTAL CODE: COUNTRY:

PHONE: E-MAIL:

PURCHASE DATE (MONTH / DAY / YEAR):

PURCHASED FROM (DEALER NAME):

SALES PERSONS NAME:

CROSSBOW SERIAL NUMBER:

CROSSBOW MODEL NUMBER:

IMPORTANT:

Register within 30 days of your purchase online at www.killercrossbows.com or mail in completed registration information received at purchase. Retain copy of sales receipt as this is required at time of free inspection and should your crossbow ever need warranty service.

